AWNING WINDOW OPERATOR INSTALLATION INSTRUCTIONS

Select new operator by:

1. Matching mounting hole pattern of old operator to new operator.

2. Matching link length and style of old operator to new operator.

Installing new operator:

1. Attach link to torque bar with original fasteners.

2. Mount operator with original mounting screws.

NOTE: Bolts, bushings, E rings, screws and rivets, are sold separately.

Instrucciones para instalar operadoras de ventana tipo "Awning"

Para seleccionar su nuevo operador:

1. *Compare los huecos que se usan para instalar el operador a la ventana.*

2. *Compare el largo del brazo del operador.*

Para instalar el nuevo operador:

1. *Conecte el brazo del operador a la barra que se mueve en la ventana.*

2. *Monte el operador a la ventana con los tornillos originales.*

NOTA: Los tornillos para instalar el operador a la barra y a la ventana se venden por separado.

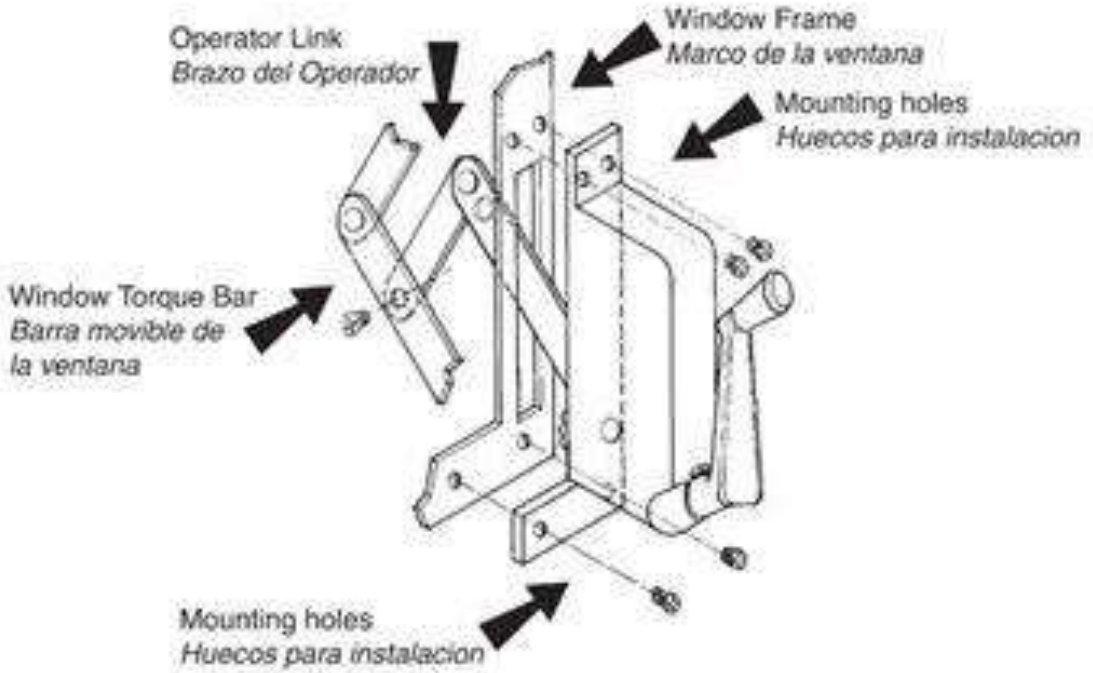

Right Hand Operator Shown